



# Simpo<sup>®</sup>Square 24


## Sign Insertion Instructions

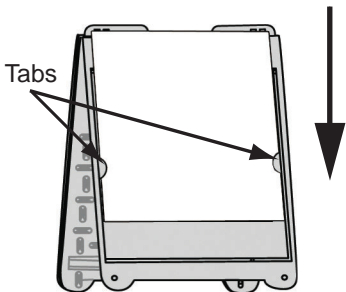


1. Slide sign down through the tabs

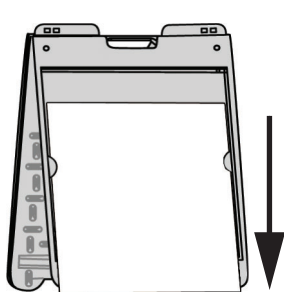

2. Slide through, pulling sign in front of bottom slot until sign hits the ground

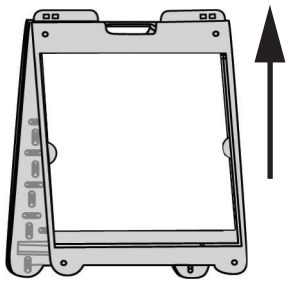

3. Push sign up into top slot

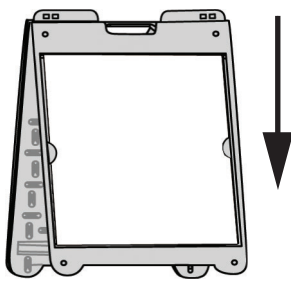


4. Slide sign down into bottom slot

## Sand Filling Instructions

The SimpoSquare 24 has two fill holes for sand, one on each half of the sign frame.

Remove plug from fill hole and fill the hole with dry sand. 3 lbs. of sand per hole maximum, for a total of 6 lbs. per sign frame is recommended.

Play sand is suggested for ease of filling.

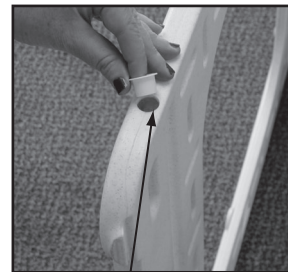


Sand Fill Hole

## Sign Rider Insertion Instructions

Stand the sign frame on the ground, spreading open the sign faces only half way. Place the Sign Rider in the hinge openings between the sign faces. Now, move the sign faces apart until fully extended. The hinges will "grab" the Sign Rider.

### View of Hinge from above

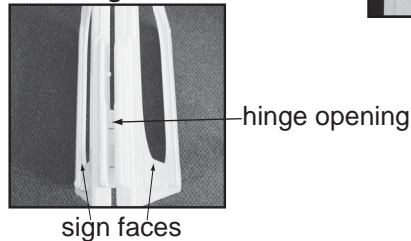

hinges